



EN ■ User Manual

CZ ■ Uživatelská příručka

SK ■ Používateľská príručka

HU ■ Felhasználói kézikönyv

PL ■ Podręcznik użytkownika

PLL DIGITAL FM PORTABLE RADIO


**PŘENOSNÉ DIGITÁLNÍ PLL FM
RÁDIO**

**PRENOSNÉ DIGITÁLNE PLL FM
RÁDIO**

**HORDOZHATÓ DIGITÁLIS PLL FM
RÁDIÓ**

**PRZENOŚNE CYFROWE RADIO
PLL FM**

CONTROL LOCATION

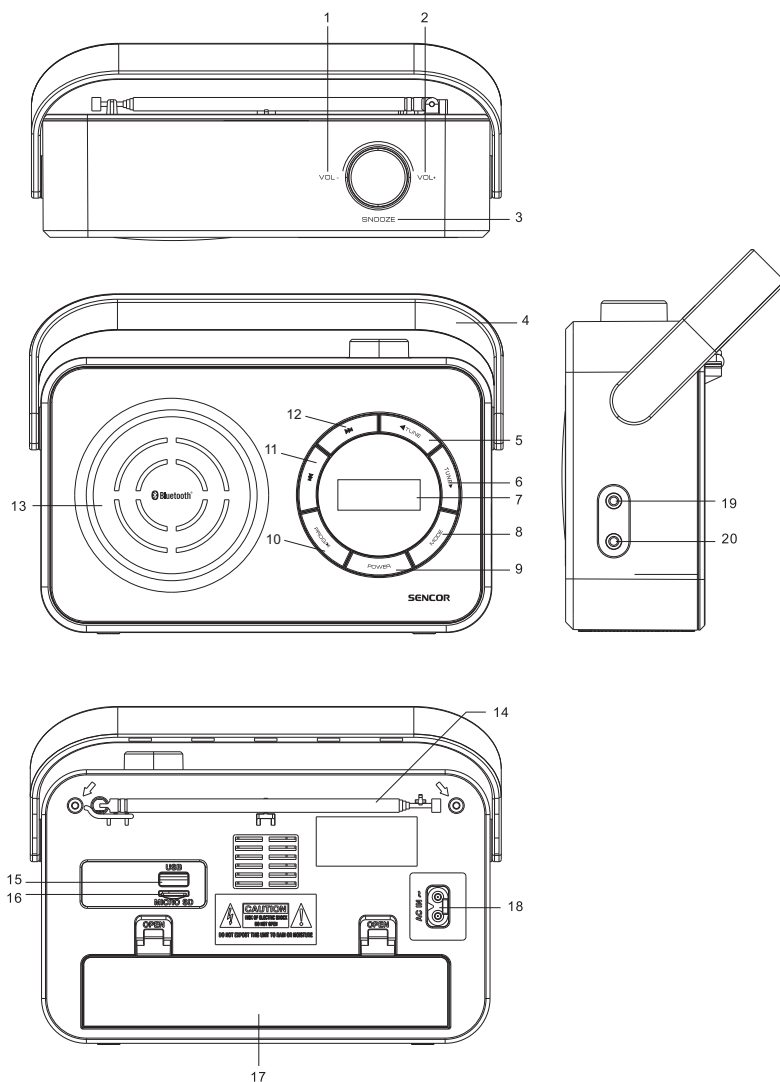

1. VOLUME -
2. VOLUME +
3. SNOOZE / SLEEP
4. CARRYING HANDLE
5. TUNING -
6. TUNING +
7. LCD DISPLAY
8. MODE / ALARM
9. POWER (ON / OFF)
10. PROG / PLAY PAUSE / TIME SET

11. PRESET - / PREVIOUS
12. PRESET + / NEXT
13. SPEAKER
14. ROD ANTENNA
15. USB CONNECTOR
16. MICRO SD CARD SLOT
17. BATTERY COMPARTMENT
18. AC IN SOCKET
19. AUX-IN JACK
20. HEADPHONE JACK

POWER SUPPLY

AC OPERATION

Insert one end of the supplied AC power cord to the AC IN socket located at the rear of the unit, and the other end to the wall outlet. The unit will be automatically in standby mode when connecting to AC power.

To disconnect the set from the AC supply completely, withdraw the AC power cord plug from the wall outlet.

DC (BATTERY) OPERATION

1. To play your unit on batteries, the AC power cord must be disconnected from the unit and Wall outlet.
2. Insert 3 batteries, type R14, UM2 or C cells (not included) into battery compartment and then close the compartment door.

Warning: Before using the unit, check that the local mains supply is compatible with the unit.

Do not plug or unplug the power cable when your hands wet. When planning not to use the unit for long periods of time (i.e. vacation etc.) disconnect the plug from the wall outlet.

Note:

Check your batteries regularly. Old or discharged batteries should be replaced. If the unit is not to be used for sometimes or is being run exclusively on AC electrical current, remove batteries from the battery compartment to avoid leakage.

SETTING THE TIME

1. In standby mode.
2. Press and hold **PROG/TIME SET** for 3 seconds to start time setting.
3. Press **PREVIOUS** or **NEXT** - for 12-hours/24-hours selection, and press **PROG/TIME SET** to confirm.
4. To set the hours, press **PREVIOUS** or **NEXT** while the display is still flashing, and press **PROG/TIME SET** to confirm hours.
5. To set the minutes, press **PREVIOUS** or **NEXT** while the display is still flashing, and press **PROG/TIME SET** to confirm minutes to complete the time setting.

SETTING THE ALARM

1. Check the radio is switched off.
2. Press and hold **MODE / ALARM** for 3 seconds on the front panel to start alarm setting.
3. To set the hours, press **PREVIOUS** or **NEXT** while the display is still flashing, and press **MODE / ALARM** to confirm hours.
4. To set the minutes, press **PREVIOUS** or **NEXT** while the display is still flashing, and press **MODE / ALARM** to confirm minutes.
5. To set alarm sound (Buzz / Radio / USB), press **PREVIOUS** or **NEXT** while the display is still flashing, then press **MODE / ALARM** to set up the volume and press **MODE / ALARM** to confirm alarm sound to complete the alarm setting.

Remark: Press **ALARM** once to enable / disable the alarm function. To make sure the alarm icon is switch on if alarm function is in using.

SNOOZE FUNCTION

1. When alarm sounds, you can press **SNOOZE** on top to temporarily suspend the alarm. The radio will ring again at 9 minutes later. (The Snooze interval time is 9 minutes).
2. Snooze can be repeated until the **POWER** or **VOLUME+** or **VOLUME-** is pressed.

SLEEP FUNCTION

1. Press the **SLEEP** to select a time. For example, when the LED display shows "SL 15". The radio turns on and then turns off automatically after 15 minutes.
2. To select a longer playing time, press the **SLEEP** button to select 15 / 30 / 45 / 60 / 75 / 90 minutes or OFF.
3. To turn off the radio at any time, press the **POWER** to standby mode.

RADIO

1. Press **POWER** to switch on the radio.
2. Press **MODE** once or more to select **FM** waveband.
3. The display shows the radio station details throughout the radio mode.
4. Select your station by using **TUNING+** or **TUNING-**.
5. Adjust the sound with **VOLUME+** or **VOLUME-**.
6. To switch to standby mode, press **POWER** once.

TUNING

Manual tuning

Press **TUNING +** or **TUNING -** briefly, once or more until the right frequency is found.

Automatic tuning

1. Press and hold down **TUNING +** or **TUNING -** until the display frequency starts to run.
2. When a station of sufficient strength has been found tuning stops, or you can stop automatic tuning by pressing **TUNING +** or **TUNING -** again.

PRESETS

You can store the frequencies of up to 50 radio stations in the memory, (50 in FM wave bands).

A stored frequency can be erased from the memory by storing another frequency in its place.

Automatic Preset

1. Press and hold down **PROG** until the display frequency starts to run.

Manual Preset

1. Select your wave band and tune to your desired station (See **TUNING**).
2. Press **PROG** once to enter programming mode.
3. Press **PRESET +** or **PRESET -** to select the desired memory location.
4. Press **PROG** once again to confirm the selected station.
5. To listen to a preset station: press the **PRESET +** or **PRESET -** for selecting your desired station.

To improve reception:

For FM, pull out the telescopic aerial. To improve FM Reception incline and turn the aerial, reduce its length if the FM-signal is too strong (very close to a transmitter).

VOLUME

Adjust the sound with the controls **VOLUME +** or **VOLUME -**.

You may connect headphones (not included) to 3.5mm **HEADPHONE JACK**. The loudspeaker is then muted.

Avoid listening to headphones at high volume levels to prevent possible hearing damage.

USING THE AUX INPUT

Connect the AUX connect wire from the out jack of your Personal Player such as portable MP3 player to the AUX input jack.

Turn on your Personal Player to begin playing, adjust the volume to desire listening level.

Adjust the volume by rotating the **VOLUME +** or **VOLUME -**.

USB, MICRO SD CARD PLAYBACK

Able to decode and playback all MP3 files which stored in the memory media with USB connector, MICRO SD Card Slot.

1. Select **USB or SD**.
2. Before connecting the USB media to the unit, make sure the port is in correct direction and will connect. Or insert MICRO SD Card straightly without bending.
3. The system will automatically start reading the MP3 files in the USB Storage Media, MICRO SD Card.
4. Press **PREVIOUS / PLAY PAUSE / NEXT** buttons for Previous / Play & Pause / Next functions.

Wrongly connect the USB Storage Media or MICRO SD Card upside down could damage the unit or the USB Storage Media or MICRO SD Card. A locked MICRO SD Card cannot be detected or playback.

BLUETOOTH FUNCTION

1. Switch on the unit, press **MODE** to Bluetooth function. The Bluetooth indicator will be flashing.
2. Activate the Bluetooth function in your Bluetooth device.
3. Select "**SRD 3200**" on your Bluetooth device for pairing. The speakers will have a pop sound to confirm if successfully connect with your Bluetooth device.
4. Start music play on your Bluetooth device.
After connected, you can control the playback, pause, next, previous function by both your Bluetooth device or the unit directly.
5. Press **PROG** button for 3 second to disconnect the pairing of Bluetooth function. The Bluetooth indicator will be flashing after pairing disconnected.

Tips:

The device will be disconnected when the device is moved beyond the operational range. If you want to reconnect the device to the unit, place it within the operational range.

Note:

The operational range between this unit and a Bluetooth device is approximately 10 meters. Any obstacle between this unit and a Bluetooth device can reduce the operational range.

Before you connect a Bluetooth device to this unit, familiarize yourself with the Bluetooth capabilities of the device. Compatibility with all Bluetooth devices is not guaranteed.

Keep this unit away from any other electronic device that may cause interference.

SPECIFICATIONS

Speaker:	3 inches, 8 ohm dynamic speaker
Power Output:	1.2W
AC Operate:	230V ~ 50Hz
DC Operate:	DC 4.5V Battery (3 x 1.5V "R14 / UM-2 / C")
Off mode consumption:	<0,5 W
Standby consumption:	<1 W
Automatic standby time:	1 min

This device has a power saving function that automatically turns off or switch to standby if no button is pressed for a certain period of time under certain operating conditions. If this function is disabled, power consumption will increase.

PRECAUTIONS

1. For AC operation, make sure the voltage is compatible. Always use the supplied AC power cord; never use other AC power cord.
2. Always disconnect the AC power cord from the AC power source when it is not in use.
3. Do not leave the batteries in the compartment for a long time. Remove the batteries to avoid leakage and damage.
4. Do not expose the unit to extreme temperature nor high humidity to ensure normal functioning for a long lifetime.
For instances, never place the unit in bathing areas nor around stoves and radiators.
5. If you find the unit is not working properly, please take it to your nearest services center. Do not attempt to repair by yourself.

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet, refer to service agent or qualified engineer only.

IMPORTANT: PLEASE READ BEFORE USING AND KEEP FOR FUTURE REFERENCE.

CAUTION

USING THE APPLIANCE IN VIOLATION OF THE MANUAL CAN CAUSE INJURY (BY ELECTRIC CURRENT) OR PERMANENT DAMAGE TO THE APPLIANCE.
DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED REPLACE ONLY WITH THE SAME OF EQUIVALENT TYPE.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications.

Avoid installing the unit in locations described below:

1. Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, or other equipments that radiate too much heat.
2. Places subjected to constant vibration.
3. Unventilated or dusty places.
4. Humid or moist places.

CAUTION

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). DO NOT OPEN THE UNIT. ANY SERVICING PLEASE REFER TO QUALIFIED SERVICE PERSONNEL.

WARNING

- Remove batteries if exhausted or if they will not be used for a long period.
- The incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst. Therefore:
 - Do not mix battery types, e.g. alkaline with zinc carbonate.
 - When inserting new batteries, replace all batteries at the same time.
 - Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- The apparatus is used in moderate climates.
- The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on the apparatus.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe.



The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.; No naked flame sources, such as lighted candles, should be placed on the apparatus; Attention should be drawn to the environmental aspects of battery disposal.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



The product meets EU requirements.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

Hereby, FAST ČR, a.s. declares that the radio equipment type SRD 3200 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: www.sencor.eu

Address of the manufacturer: FAST ČR, a.s., U Sanitasu 1621, Říčany CZ-251 01

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be identified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Manufacturer:

FAST ČR, a.s., U Sanitasu 1621, Říčany 251 01, Czech Republic
info@sencor.com

Authorized service centers:

Visit www.sencor.com for detailed information about authorized service centers.

The original version of the instructions is in the Czech language, other language versions are made by the appropriate translation.

