

SENCOR®

SSI 0950BZ





STEAM GENERATOR
Translation of the original manual




SENCOR®

SSI 0950BZ

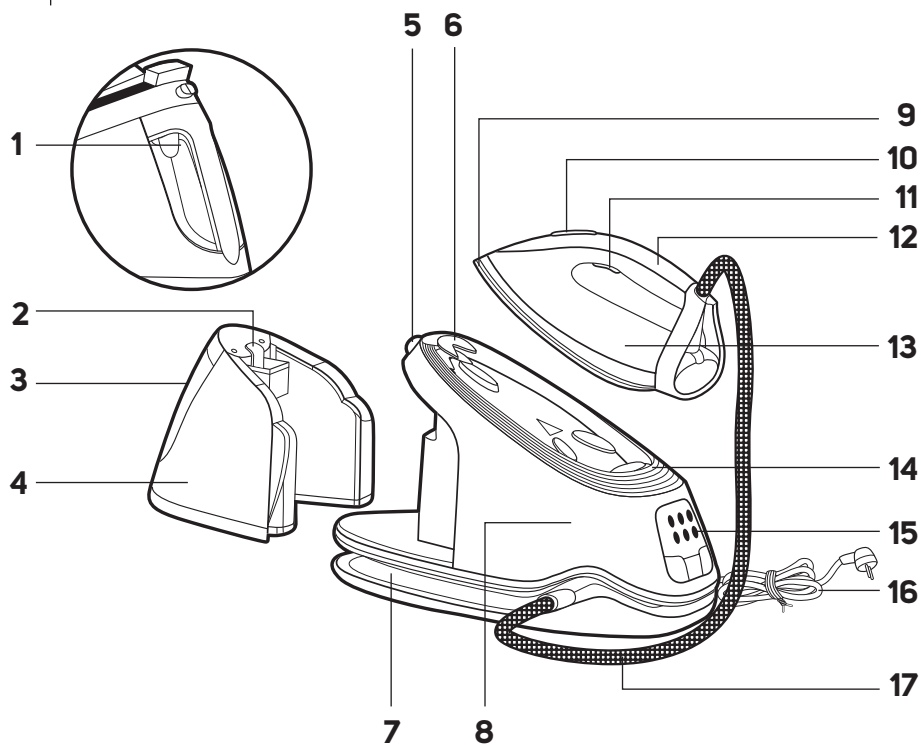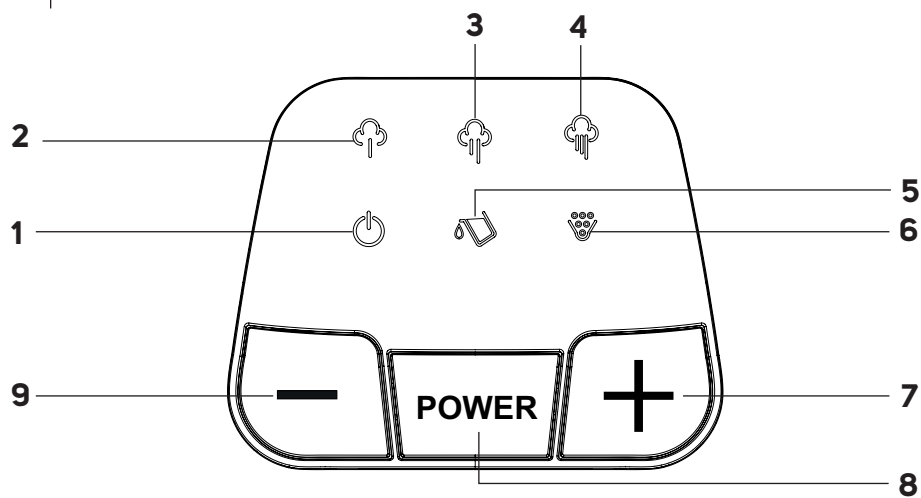


A**B**


C1

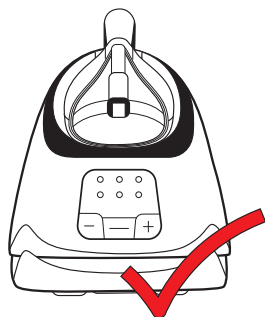

C2

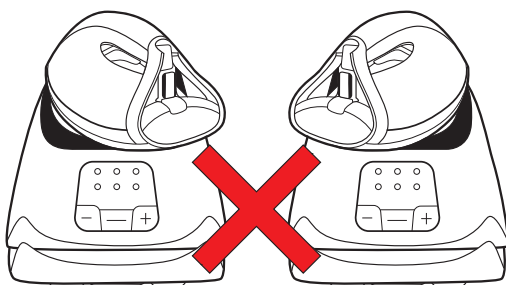

D

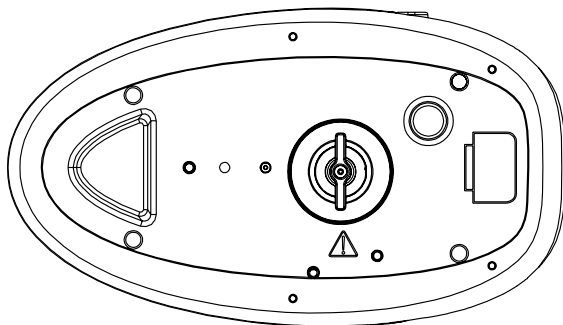

Important Safety Instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

General Warnings

- This appliance may be only used by children aged 8 and older and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance. Cleaning and maintenance must not be performed by children without supervision.
- If the power cable is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cable damaged.
- The iron must not be left unattended when connected to a power supply.
- The plug must be pulled out of the socket before filling the water tank.
- Filling, descaling, rinsing or inspection openings under pressure must not be opened during use.
- The iron must be used and used and placed on a flat and stable surface.

- When placing the iron on the stand, ensure that the surface on which the stand is located is stable.
- The iron must not be used if it has fallen, if there are visible signs of damage, or if it leaks.
- Do not leave the iron and its power supply within reach of children under 8 years of age when it is powered or cooling.



WARNING. Hot surface.

- Surfaces may become hot during use.

Additional Important Safety Instructions for Use of the Appliance

- Before connecting the base to the power socket, ensure that the voltage indicated on its rating plate matches the voltage in the socket.
- Connect the base only to a properly grounded socket. Do not use an extension cord.
- Do not touch the iron with wet or moist hands when connected to the power socket.
- To prevent the risk of electric shock, do not wash the iron or base under running water, spray it with water, or immerse it in water or any other liquid.
- Ensure that the power cable does not come into contact with water, moisture or a heated surface.
- Do not place heavy objects on the power cord. Make sure that the power cord does not hang over the edge of the table or touch hot surfaces or sharp objects.
- Disconnect the base from the power socket by pulling the plug of the power cord, not the cable itself. Otherwise, damage to the power cord or the socket may occur.
- Do not pull or carry the base by the power cord. Do not pull the iron by its cable.
- To avoid the risk of electric shock, do not repair the iron or base yourself or modify them in any way. All repairs should be carried out by an authorised service centre. By interfering with the product, you risk losing the legal right to defective performance or warranty for quality.
- If the iron cable is damaged, have it replaced at a specialised service centre. It is forbidden to use the iron with a damaged cable.
- The iron is intended for household use. Do not use it in an industrial environment or outdoors.
- Do not place the iron on or near an electric or gas stove or other sources of heat.
- Never iron clothes while wearing them.
- Do not touch the hot soleplate. Otherwise, burns may occur.
- Ironed clothes may be hot immediately after removing the iron. Take extra care to avoid burns.
- Never fill the water tank directly under the tap. Always use a suitable container for filling the tank. Do not add vinegar, descalers, or other additives to the tank.
- Before cleaning or any other handling of the iron and the base that you have disconnected from the power socket, allow the soleplate to cool down.
- The steam generator will emit a warning signal and automatically shut down if the ambient temperature drops below 0 °C.

EN Steam Generator

User Manual

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Before using this appliance, please familiarise yourself with the user manual, even if you are already familiar with using similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference.
- It is recommended to keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right of defective performance or quality guarantee. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.

DESCRIPTION OF THE STEAM GENERATOR

A1 Water tank release button	A10 Temperature indicator
A2 Filling opening	A11 Steam release button
A3 Water tank handle	A12 Iron handle
A4 Water tank	A13 Iron
A5 Iron lock button	A14 Heat-insulated surface
A6 Iron lock	A15 Control panel
A7 Iron cable storage space	A16 Power cord
A8 Steam generator base	A17 Iron cable
A9 Soleplate	

DESCRIPTION OF THE CONTROL PANEL

B1 Power indicator	B5 Low water level indicator
B2 Low temperature indicator (145 ± 20 °C)	B6 Descaling/cleaning indicator
B3 Medium temperature indicator (145 ± 20 °C)	B7 + button
B4 High temperature indicator (160 ± 20 °C)	B8 POWER button
	B9 – button

PURPOSE OF USE

- The steam generator iron is intended for ironing clothes, fabrics, or materials specifically designed for ironing. Refer to the information label on the clothes, fabric or material.

PLACING THE STEAM GENERATOR

- Place the steam generator on a firm, flat and dry surface at a sufficient distance from the power socket.
- Keep the steam generator at a sufficient distance from heat and steam sensitive surfaces or materials.
- Place the iron flat on the heat-insulated surface – see figure **C1**. The iron should not be placed on its side – see figure **C2**.

BEFORE FIRST USE

- Before first use, remove the appliance and its accessories from the packaging and discard all promotional labels and tags. Check that neither the appliance nor any of its components is damaged.
- Wipe the soleplate of the iron with a lightly damp cloth and then dry it. Also, wipe the outer parts of the iron with a dry or lightly damp cloth and dry them thoroughly.

PREPARATION FOR USE

Filling the Water Tank



Warning:

Always ensure that the steam generator is switched off and the power cord plug is disconnected from the power socket before filling the tank.

1. Press the water tank release button and pull the water tank out of the base by the handle.
 2. Remove the water tank cap and pour clean cold water into the tank. Wipe any spilled water with a dry cloth. The capacity of the tank is approximately 1.5 l.
 3. Put the cap back on, making sure it seals properly, and insert the tank back into the base.
- Use a filling measuring cup when filling the tank. Do not fill the water tank directly from the tap.
 - Do not overfill the tank. Always fill to the MAX mark indicated on the tank during filling.
 - Fill the tank only with clean cold tap water or use it in combination with distilled water, depending on the hardness of the water in your area. The harder the water, the higher the distilled water ratio.



Warning:

Never fill the tank with hot or boiling water, service water or any other liquid. Do not add water softener, vinegar, starch, descaling agent, perfume mixes, or other additives.

Iron lock

- For safety reasons, the steam generator is equipped with an iron lock.
- When the iron is placed on a heat-insulated surface, press the iron lock button to release the lock and remove the iron.
- If you are ironing, leave the lock loose so that you can place the iron on a heat-insulated surface during ironing.
- After ironing, place the iron on a heat-insulated surface and press the lock button to close the lock. The iron will not be removable from the heat-insulated surface.
- If you want to place the iron on the heat-insulated surface but the lock is locked, first press the lock button to release it, then place the iron on the heat-insulated surface and press the lock button to lock it.

First Use of the Iron

- Before the first use of the iron, we recommend ironing a small damp cloth or towel with the iron at a high temperature to remove any possible residues on the soleplate.
- You may notice a strange smell during the first use. This is a normal occurrence. It disappears with use.
- During the first use of the iron, small particles or impurities may come out of the holes on the soleplate. Do not be surprised or disturbed by this. This does not affect the proper functioning of the steam generator.



Note:

After turning on, you will hear the sound of the pump. This is a normal sound.



Note:

During the heating process of the soleplate, a small amount of water may flow from the soleplate. This is a normal occurrence.

USING THE STEAM GENERATOR

Connecting to a Power Source




- Place the steam generator on an ironing board or surface where you will be ironing.
- Unwind the power cord completely and plug the power cord plug into a properly grounded power socket.

Turning On the Steam Generator




- Press the **POWER** button to turn the steam generator on. The power indicator will light up.
- The low steam intensity indicator will flash on the display, indicating the default setting. A flashing indicator means that the steam generator is heating up.

Temperature Setting

When the steam generator is on, use the + or – buttons to select the temperature.

-  low temperature
-  medium temperature
-  high temperature

With each press of the + or – button, there will be a short beep. The indicator of the selected temperature will flash on the display. When it lights up, the steam generator is ready for use at the set temperature.

Temperature Indicator	Temperature	Fabric
Low 	145 ± 20°C	Acetate (artificial silk) Fabrics with elastene
Medium 	145 ± 20°C	Polyamide Polypropylene Cupro
High 	160 ± 20°C	Polyester Silk Triacetate fabric Viscose Wool Cotton Linen



Note:
You can change the temperature during ironing. Always wait for the indicator to light up. We recommend sorting the clothes so that you iron it from low to high temperatures.



Warning:
HOT SURFACE AND HOT STEAM!
Be especially careful when ironing and handling the iron. The soleplate and the steam temperature are very hot. Serious injury and burns can occur with improper handling.
Never touch the soleplate with your hands! Do not iron clothes directly on yourself or on others!



Warning:
Never leave the steam generator on unattended. Pay extra attention if children are near the steam generator, even when it is turned off.

Ironing without Steam

- If you iron without steam, do not fill the water tank. Leave it empty.
- Use the +/- buttons to select the desired temperature and wait for the indicator to light up.

Ironing with Steam

- Before ironing with steam, it is necessary to refill the water tank. Follow the instructions in the “**Filling the Tank**” section.
- Use the +/- buttons to select the desired temperature and wait for the indicator to light up.
- Press and hold the steam release button while ironing. Steam will come out of the steam outlets. When you release the steam release button, the steam release stops. This will allow you to use the iron for use dry ironing even if there is water in the tank.


Steam Boost

- The steam boost releases a larger amount of steam at the maximum temperature. Use this function for heavily wrinkled fabrics or garments where you need to loosen fibers for easier ironing.
- Press the steam release button twice within 1 second to activate the steam boost.

Putting the Iron Down during Ironing

- Place the iron on the heat-insulated surface of the steam generator during ironing. Make sure the iron lock is released so you can easily place the iron.

Refilling the Water Tank

- When the water in the tank drops below the minimum level, the low water level indicator in the tank  will light up and a short beep will sound twice.
- Refill the water tank following the instructions in the section “**Filling the Water Tank**”.

Turning Off the Steam Generator

- After finishing ironing, press and hold the **POWER** button for 2 seconds to turn the generator off. Icons on the display will go out.
- Disconnect the power cord from the power socket and allow the steam generator to cool before cleaning.

Automatic Shutdown

- The steam generator will automatically turn off after about 10 minutes of inactivity. To restart, press the **POWER** button.

Transporting the Steam Generator

- Before transporting the steam generator, make sure that the iron is securely placed on a heat-insulated surface and that the iron lock is locked.
- Coil the iron cable around the base. There is a space into which the cable can be inserted and wound. Coil and secure the power cord with a strap to avoid stepping on it during transport.
- We recommend transporting the steam generator when it has cooled down.
- Hold the steam generator by the base with both hands for comfortable transport.
- The steam generator can also be transported by the iron handle placed on the surface with the lock engaged. However, this method of transport is only suitable for short distances.

IRONING TIPS AND TRICKS

- Follow the care instructions for each garment. Iron only solid-coloured and heat-resistant fabrics. We recommend ironing the printed clothes inside out.
- Sort the clothes by temperature from low to high. Start ironing items at a low temperature and gradually increase it, as the iron heats up faster than it cools down.
- Never iron over areas with sweat stains or other stains. High heat will set the stain making it difficult to remove.
- To prevent silk, wool, and synthetic fabrics from becoming shiny after ironing, iron them inside out.
- Some materials are easier to iron when lightly damp.
- For fine fabrics, sprinkle water or iron over a slightly damp cloth. You can also hold the iron about 2 cm above the fabric.
- Iron heavily wrinkled garments at a high temperature with steam and use the steam boost function to loosen and straighten the fabric fibres.
- Avoid ironing zips, studs or other decorative parts of clothing. This could damage the soleplate.

- To prevent wrinkling, select an appropriate spin speed when washing and hang the laundry correctly on the clothesline or rack. Hang certain clothing items, such as shirts, on hangers, and dry sweaters, cardigans, etc., on a flat surface.

.....

CLEANING AND MAINTENANCE

- Before cleaning, turn the iron off with the **POWER** button, unplug of the power cord and let it cool down completely.
- Do not use abrasive cleaning agents, solvents, or any substances to clean any parts of the appliance that could damage the surface of the appliance.




Warning:
To prevent the risk of electric shock, do not immerse the appliance, plug or power cord in water or any other liquid.

Cleaning the Steam Generator

Wipe the soleplate of the iron with a lightly damp cloth and then dry it. Also, wipe the outer parts of the iron with a dry or lightly damp cloth and dry them thoroughly.

Removing Mineral Deposits

- When the descaling/cleaning indicator  of the iron lights up, it is necessary to clean the steam generator to prevent excessive accumulation of mineral deposits.
- To remove mineral deposits, proceed as follows:
- Turn the base of the steam generator upside down and place it horizontally on a flat surface. Make sure it is stable.
- A rotary knob is located at the bottom of the base – see figure **D**.
- Cover the knob with a towel and slowly rotate it to release it.
- Release the steam generator. Fill it and pour out the water. Repeat this two to three times to clean it.
- When the steam generator is clean, insert the rotary knob back and turn it.
- Place the base back in the upright position.



Warning:
To avoid the risk of scalding, make sure the steam generator is completely cooled down before removing the rotary knob.

Storage

- If you do not use the steam generator, turn it off, unplug it from the power socket, and let it cool down completely.
- Empty the water tank and place the iron on a thermally insulated surface. Secure it with the lock.
- Coil the iron cable around the base. There is a space into which the cable can be inserted and wound. Coil and secure the power cord with a strap to avoid stepping on it during transport.
- Store the steam generator in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.

.....

TECHNICAL SPECIFICATIONS

Rated voltage range.....	220–240 V~
Rated frequency.....	50–60 Hz
Rated power input.....	2520–3000 W
Water tank capacity.....	1.5 l
Heating time.....	approximately 3 minutes

We reserve the right to change the text and technical specifications.

.....

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material in the designated waste disposal area determined by the municipality

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal and recycling of these products, deliver them to designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product.

By properly disposing of this product, you help preserve valuable natural resources and contribute to preventing potential negative impacts on the environment and human health resulting from improper waste disposal. For further details, contact your local authorities or the nearest collection point.

Fines may be imposed for improper disposal of this type of waste in accordance with national regulations.

For Business Entities in European Union States

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

Disposal in Other Countries Outside the European Union

This symbol is valid in the European Union. To dispose of this product elsewhere, request necessary information on the correct disposal method from local authorities or your retailer.



This product complies with all the essential requirements of the applicable EU directives.

