

SENCOR®

SSI 0880BZ



HANDHELD GARMENT STEAMER

Translation of the original manual





SENCOR®

SSI 0880BZ



A

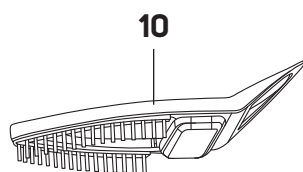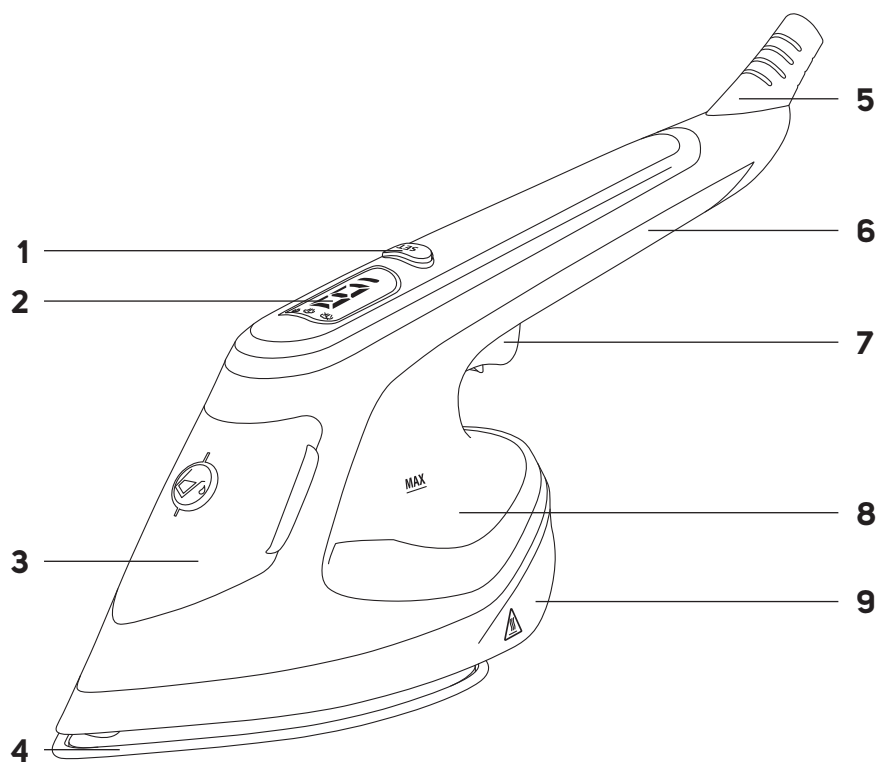

Important Safety Instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be only used by children aged 8 years and older and by persons with physical, sensory or mental impairments or lack of experience and knowledge, if they are supervised or have been instructed on the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance. Cleaning and maintenance must not be performed by children without supervision.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cable damaged.
- The iron must not be left unattended when connected to a power socket.
- The plug must be pulled out of the socket before filling the water tank or cleaning.
- The filling hole must not be opened during use.
- The iron must be used and used and placed on a flat and stable surface.
- When placing the iron on the stand, ensure that the surface on which the stand is located is stable.
- The iron must not be used if it has fallen, if there are visible signs of damage, or if it leaks.

- Do not leave the iron and its power supply within reach of children under 8 years of age when it is powered or cooling.



Caution: Hot Surface
Surfaces may become hot during use.

- Pay extra attention to the appliance as it produces steam.
- Before connecting the base to the power socket, ensure that the voltage indicated on its rating plate matches the voltage in the socket.
- Connect the base only to a properly grounded socket. Do not use an extension cord.
- Do not touch the iron with wet or moist hands when connected to the power socket.
- To prevent the risk of electric shock, do not wash the iron under running water, spray it with water, or immerse it in water or any other liquid.
- Ensure that the power cable does not come into contact with water, moisture or a heated surface.
- Do not place heavy objects on the power cord. Ensure that the power cord does not hang over the edge of the table or touch hot surfaces or sharp objects.
- Disconnect the iron from the power socket by pulling the plug of the power cable, not the cable itself. Otherwise, damage to the power cable or the socket may occur.
- Do not pull or carry the iron by the power cable.
- To avoid the risk of electric shock, do not repair the iron or base yourself or modify them in any way. All repairs should be carried out by an authorised service centre. By interfering with the product, you risk losing the legal right to defective performance or warranty for quality.
- The iron is designed for use in the home and indoors. Do not use it in an industrial environment or outdoors.
- The iron is designed for ironing laundry and fabrics that are suitable for ironing. Do not use the iron for any purpose other than its intended use. Do not modify the iron for any other use.
- Do not place the iron on or near an electric or gas stove or other sources of heat.
- Do not use the iron in damp or dusty environments. Do not expose the iron to direct sunlight.
- Never iron clothes while wearing them.
- Do not touch the hot soleplate. Otherwise, burns may occur.
- Ironed clothes may be hot immediately after removing the iron. Take extra care to avoid burns.
- Never fill the water tank directly under the tap. Always use a suitable container for filling the tank. Do not add vinegar, descalers, or other additives to the tank.
- Before cleaning or any other handling of the iron that you have disconnected from the power socket, allow the soleplate to cool down.
- This appliance is not intended for operation through an external timer switch or a remote control.
- When cleaning, follow the instructions in this manual.
- Do not repair the iron yourself. It does not contain user serviceable parts. All repairs should be carried out only by an authorised service centre.

EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION



This product meets all the basic requirements of the applicable EU directives.



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste.

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Before using this appliance, please familiarise yourself with the user manual, even if you are already familiar with using similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference.
- It is recommended to keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right of defective performance or quality guarantee. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.

DESCRIPTION OF THE IRON

A1 SET button	A7 Steam pulse button with lock
A2 Display	A8 Water tank
A3 Water tank lid	A9 Resting area
A4 Soleplate	A10 Brush
A5 Power cord end	A11 Measuring cup
A6 Handle	

PURPOSE OF USE

- The iron is intended for ironing clothes, fabrics, or materials specifically designed for ironing. Refer to the information label on the clothes, fabric or material.

BEFORE FIRST USE

- Before first use, remove the appliance and its accessories from the packaging and discard all promotional labels and tags. Check that neither the appliance nor any of its components is damaged.
- Wipe the soleplate of the iron with a lightly damp cloth and then dry it. Also, wipe the outer parts of the iron with a dry or lightly damp cloth and dry them thoroughly.
- Fill the tank with clean water and then empty it. This removes any dirt in the tank.

PREPARATION FOR USE

Filling the Water Tank



Warning:

Always ensure that the iron is switched off and the power cable is disconnected from the power socket before filling the tank.
We recommend using only distilled or demineralised water.

1. Open the water tank lid and tilt the iron slightly.
2. Pour clean cold water using a measuring cup. Wipe any spilled water with a dry cloth.
3. Close the cover. Press gently until you hear a click.
- Use a filling measuring cup when filling the tank. Do not fill the water tank directly from the tap.
- Do not overfill the tank. Always fill to the MAX mark indicated on the tank during filling.



Warning:

Never fill the tank with hot or boiling water, service water or any other liquid. Do not add water softener, vinegar, starch, descaling agent, perfume mixes, or other additives.

First Use of the Iron

- Before the first use of the iron, we recommend ironing a small damp cloth or towel with the iron at a high temperature to remove any possible residues on the soleplate.
- You may notice a strange smell during the first use. This is a normal occurrence. It disappears with use.
- During the first use of the iron, small particles or impurities may come out of the holes on the soleplate. Do not be surprised or disturbed by this. This does not affect the proper functioning of the iron.



Note:

During the heating process of the soleplate, a small amount of water may flow from the soleplate. This is a normal occurrence.

USING THE IRON

1. Place the iron on the resting surface on the ironing board or the area where you will be ironing.
2. Put the brush on as needed. We recommend using the brush if you will be ironing/steaming delicate fabrics.
3. Unwind the power cord completely and plug the power cord plug into a properly grounded power socket.
4. The power-on light comes on.
5. Press the SET button briefly to switch the iron on. The iron will start to heat up and the display will start the iron heating countdown. This usually takes 20 seconds.
6. As soon as the display shows "0" and the  symbol lights up, the iron is ready for use.
7. Press the SET button briefly again and select the iron mode:
0 – 1 – 2.
- 0: Ironing without steaming, the  symbol lights up;
- 1: ironing with steaming (minimum steam), the  symbol lights up;
- 2: steam ironing (maximum steam), the  symbol lights up.
8. If you need the iron to generate maximum steam during use, press the steam impulse button and keep it pressed all the time. As soon as you release it, the iron stops generating steam.
9. For a steady generation of steam (without having to keep the button pressed), slide the button lock downwards. The button will lock in this position. To release the button, slide the lock upwards.
10. After ironing, press and hold the SET button until the display turns off, and unplug the power cord from the power socket.



Warning:

HOT SURFACE AND HOT STEAM!

Be especially careful when ironing and handling the iron. The soleplate is very hot and the steam temperature is high. Serious injury and burns can occur with improper handling.
Never touch the soleplate with your hands! Do not steam clothes directly on yourself or on others!



Warning:

Never leave the iron on unattended. Pay extra attention if children are near the iron, even when it is switched off.



Note:

The steam generation function can be selected only when you set the steam ironing. If you select ironing without steam, the function will not be active.

Vertical Ironing

- The iron can also be used for vertical ironing of curtains, net curtains and clothes that are hung on a hanger.

**Warning:**

Never use an iron to iron clothes that people have on.

- Select the temperature according to the type of fabric you will be ironing. Grasp the iron by the handle and hold it against the garment or curtain. Iron it by moving the iron from top to bottom.

Putting the iron down during Ironing

- During ironing, place the iron on the resting surface on the heat-insulated pad of the ironing board or on a safe spot on the ironing area.

Switching off the Iron

- After finishing ironing, place the iron on the resting surface and unplug the power cord from the power socket. Allow the iron to cool before cleaning.

Automatic Shutdown

- The automatic switch-off function switches off the heating element of the iron if it remains motionless for approximately 5 minutes. In this case, the power-on light will flash.
- Press the **SET** button to switch on the iron.

Protection against an Empty Tank

- The automatic steam supply during ironing will stop approximately 30 to 40 seconds after the iron detects an empty tank. "E" will appear on the display and the  symbol will flash, which means that the water tank needs to be refilled.
- Refill the water tank according to the instructions in the section **"Filling the Water Tank"**.
- Press the **SET** button to continue ironing.

IRONING TIPS AND TRICKS

- Follow the care instructions for each garment. Iron only solid-coloured and heat-resistant fabrics. We recommend ironing the printed clothes inside out.
- Sort the clothes by temperature from low to high. Start ironing items at a low temperature and gradually increase it, as the iron heats up faster than it cools down.
- Never iron over areas with sweat stains or other stains. High heat will set the stain making it difficult to remove.
- To prevent silk, wool, and synthetic fabrics from becoming shiny after ironing, iron them inside out.
- Some materials are easier to iron when lightly damp.
- For fine fabrics, sprinkle water or iron over a slightly damp cloth. You can also hold the iron about 2 cm above the fabric.
- Iron heavily wrinkled garments at a high temperature with steam and use the steam boost function to loosen and straighten the fabric fibres.
- Avoid ironing zips, studs or other decorative parts of clothing. This could damage the soleplate.
- To prevent wrinkling, select an appropriate spin speed when washing and hang the laundry correctly on the clothesline or rack. Hang certain clothing items, such as shirts, on hangers, and dry sweaters, cardigans, etc., on a flat surface.

CLEANING AND MAINTENANCE

- Before cleaning the iron, unplug the power cord from the power socket and allow the appliance to cool completely.
- Empty the water tank after each use. Do not leave water in it.
- Do not use abrasive cleaning agents, solvents, etc. to clean any parts of the appliance that could damage the surface of the appliance.

**Warning:**

To prevent the risk of electric shock, do not immerse the appliance, power cable, or plug into water or any other liquid.

Cleaning the Iron

- Wipe the soleplate of the iron with a lightly damp cloth and then dry it. Also, wipe the outer parts of the iron with a dry or lightly damp cloth and dry them thoroughly.

Removing Lime Scale Deposits

- To remove water scale deposits, it is recommended to use a solution of white vinegar and water in a ratio of 1 : 3.
- Pour the solution into the tank and allow it to act for a while. Then pour the solution and pour clean water into the tank. Shake the iron slightly and pour out the water.
- Repeat the procedure if needed.

STORAGE

- If you are not going to use the iron, switch it off, unplug it from the power socket and leave it to cool down completely. Empty the water tank.
- Store the iron in a dry, clean and well-ventilated place where it will not be exposed to extreme temperatures and where it will be out of reach of children or pets.

TECHNICAL SPECIFICATIONS

Rated voltage range.....	220–240 V~
Rated frequency.....	50–60 Hz
Rated power input.....	1400–1800 W
Water tank capacity.....	180 ml
Continuous steam output.....	18–25 g/min

Changes to text and technical parameters are reserved.

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at the location designated by the municipality for waste disposal.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

For proper disposal and recycling of these products, deliver them to designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By properly disposing of this product, you help preserve valuable natural resources and contribute to preventing potential negative impacts on the environment and human health resulting from improper waste disposal. For further details, contact your local authorities or the nearest collection point. Fines may be imposed for improper disposal of this type of waste in accordance with national regulations.

For Business Entities in European Union States

To dispose of electric or electronic equipment, request necessary information from your retailer or supplier.

Disposal in Other Countries Outside the European Union

To dispose of this product elsewhere, request necessary information on the correct disposal method from local authorities or your retailer.

