

Használati útmutató

dyras

Oszlopventilátor
Modell: TF-16WIFI



Kérjük, használat előtt figyelmesen olvassa el a használati útmutatót!

BIZTONSÁGI UTASÍTÁSOK

Elektromos készülékek használatakor a tűz, áramütés és/vagy sérülés kockázatának csökkentése érdekében az alábbi alapvető biztonsági óvintézkedéseket mindig be kell tartani:

Az áramütés veszélyének elkerülése érdekében mindig húzza ki a konektorból a készüléket mielőtt szétszereli/ összeszereli, tisztítja, vagy megváltoztatja a készülék helyzetét!

- A szakszerűtlen kezelés sérülésveszélyes és interferenciát okozhat a készülékben!
- A készüléket csak rendeltetésszerűen szabad használni! A nem rendeltetésszerű használat vagy helytelen kezelés következtében keletkezett károkért a gyártó nem vállal felelősséget.
- Mielőtt a hálózatra csatlakozik, ellenőrizze, hogy az áram és a feszültség megfelelő az adattáblán található értékekkel.
- Tilos az eszközt vízbe vagy más folyadékba meríteni. Ha a készülék a vízbe esett, azonnal húzza ki a konektorból! Fennáll az áramütés veszélye!
- Soha ne próbálja meg felnyitni a burkolatot!
- A készüléket ne használja nedves kézzel, nedves talajon vagy nedves környezetben!
- Soha ne húzza ki az áramellátást nedves vagy nyirkos kezével!
- Rendszeresen ellenőrizze a kábel és a konektor állapotát!

Sérült tápvezetékét a szervízzel kell kicseréltetni a veszélyek elkerülése érdekében.

- A készülék nem üzemel, ha a kábel vagy a csatlakozó megsérült, vagy ha a készülék más módon megsérült. Ilyen esetekben a szakszervízzel kell konzultálni.
- Soha ne működtesse sérülten a készüléket! Fennáll az áramütés veszélye!
- Ha hosszabbítót használ, akkor annak az adattáblával megfelelő teljesítményűnek kell lennie, különben a kábel és/vagy a csatlakozó túlmelegedését okozhatja!
- Ez a készülék kizárólag háztartási használatra alkalmazható!
- Vigyázat! A készülék áram alatt van, amíg csatlakoztatva van a hálózathoz.
- Ha a tápkábel megsérül, a veszély elkerülése érdekében a gyártónak, annak szervizképviselőjének kell cserélnie.

Ezt a készüléket azok a személyek, akik csökkent fizikai, érzékelési vagy szellemi képességekkel rendelkeznek, vagy akiknek a tapasztalata és a tudása hiányzik, továbbá gyermekek 8 éves kortól csak abban az esetben használhatják, ha az felügyelet mellett történik, vagy a készülék használatára vonatkozó útmutatást kapnak, és megértik a használatból eredő veszélyeket.



Gyermekek nem játszhatnak a készülékkel! Gyermekek nem végezhetnek tisztítást és karbantartást felügyelet nélkül!

SPECIFIKÁCIÓ

Teljesítmény	16W
Névleges feszültség	220-240V ~50/60Hz
Időzítés	12 óra
Kijelző	LED
WIFI	2.4 G
Irányítás	távírányító, Wifi applikáció

A TERMÉK FELÉPÍTÉSE

Összeszerelés

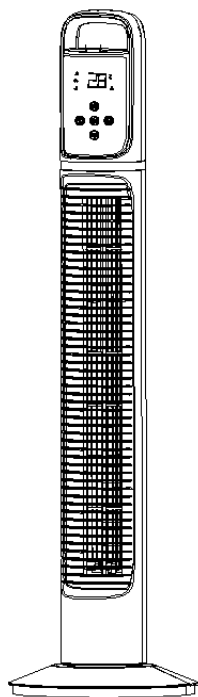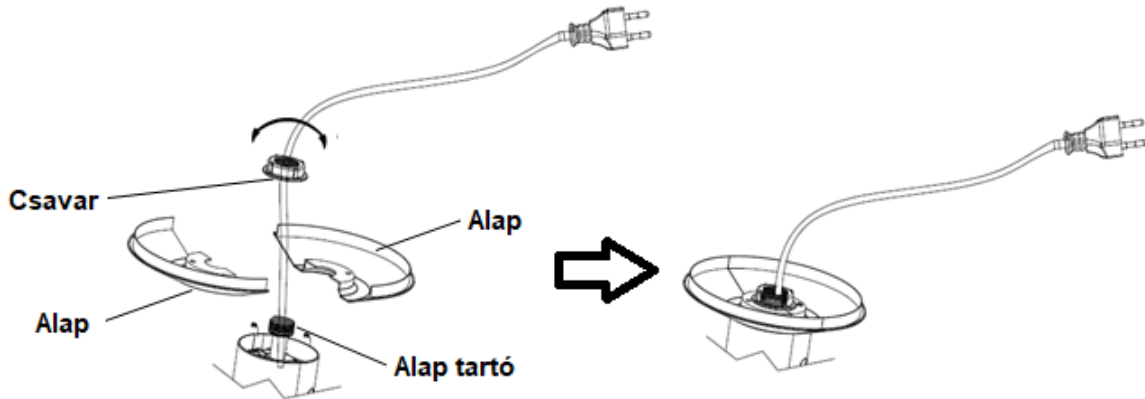

1. Vegye ki a készülék összes alkatrészét a csomagolásból, és távolítsa el minden csomagolóanyagot és betétet.
2. Fordítsa fejjel lefelé a ventilátort, lazítsa meg a ház alján található anyát.
3. Készítse elő a két félből álló alapot, mielőtt a két felét csatlakoztatná, győződjön meg arról, hogy a tápkábel áthalad az alap nyílásán. Helyezze a csatlakoztatott alapot az alaptartóra. Ezután rögzítse őket a csavar anyával.
4. Vezesse át a tápkábelt az alap alsó részén a kábeltkimeneti hornyon.

A KÉSZÜLÉK HASZNÁLATA

Dugja be a dugót az elektromos aljzatba. Rövid sípoló hangot fog hallani, és a kijelzőn megjelenik az aktuális hőmérséklet, és a ventilátor készenléti állapotba kapcsol. Az egység funkciói érintőpanellel, távirányítóval vagy okostelefon alkalmazással (Tuya Smart) vezérelhetők.

1. BE/KI: Nyomja meg az „ON/OFF” gombot a vezérlőpulton vagy a távirányítón az egység bekapcsolásához. Az egység normál üzemmódban alacsony sebességgel indul. A készenléti módba való visszatéréshez egyszerűen nyomja meg ismét az ON/OFF gombot.

2. SEBESSÉG: a sebesség 8 fokozatban (1-2-...-8) állítható a „SPEED” gomb megnyomásával. Működés közben a kijelzőn a kiválasztott fokozat látható.

3. IDŐZÍTŐ: Nyomja meg a „TIMER” gombot a ventilátor működési idejének beállításához 0 és 12 óra között. A hátralévő idő megjelenik a kijelzőn.

4. MODE: Nyomja meg a „MODE” gombot a természetes, alvó vagy normál üzemmód kiválasztásához. A ventilátor sebessége a beépített programnak megfelelően változik, és figyelmen kívül hagyja a SPEED gombbal beállított sebességet.

5. OSC: Nyomja meg az „OSC” gombot az oszcillációs funkció be- vagy kikapcsolásához.

ION: Nyomja meg az „ION” gombot a távirányítón az ionizáló funkció aktiválásához.

Wifi csatlakoztatás:

A telepítés után nyissa meg a TUYA alkalmazást.

Kapcsolja be a terméket, majd tartsa lenyomva a vezérlőpult sebesség gombját 1–3 másodpercig, amíg a WiFi jelzőfény gyorsan villog.

Csatlakoztassa a készüléket az alkalmazáson belül.





TISZTÍTÁS ÉS KARBANTARTÁS

A készülék tisztítása előtt kapcsolja ki a ventilátort és húzza ki a konnektorból. Puha ruhával tisztítsa meg a készülék felületét, és puha sörtés kefével távolítsa el a port a levegő be- és kimeneti nyílás rácsaiból.

Soha ne merítse vízbe vagy más folyadékba az oszlopventilátort!
Az elemeket használat után nem szabad kidobni, újrahasznosítják.

HULLADÉKKEZELÉS

Használt elektromos és elektronikus berendezések megsemmisítése	
 	<p>Ez a jelzés a terméken és a csomagoláson azt jelzi, hogy tilos háztartási hulladék közé dobni a már nem használt terméket, mivel kifejezetten környezetszennyező. További részletekkel kapcsolatban érdeklődjön a helyi hatóságnál!</p> <p>Ez a jelzés az Európai Unió teljes területére érvényes. Amennyiben az Európai Unióon kívül szeretné megsemmisíteni a terméket, érdeklődjön az ezzel kapcsolatos szabályzásokról a helyi hatóságnál!</p>

Gyártó/Importőr: Vöröskő Kft., 8200 Veszprém, Pápai út 36.

A CE SZIMBÓLUM



A jelölés azt hivatott jelezni, hogy a termék a rá vonatkozó Európai Uniós előírásoknak megfelel és szabadon forgalmazható az Európai Unió területén.

dyras

Instruction Manual

dyras

Tower fan
Model: TF-16WIFI



Please read the instructions carefully before using!

GENERAL SAFE GUARDS

To reduce the risk of fire, electric shock, and / or injury when using electrical appliances, the following basic safety precautions should always be followed:
To reduce the risk of electric shock, always unplug the unit before disassembling / assembling, cleaning, or repositioning the unit.

- Improper handling can result in injury and interference to the device! • The device may only be used for its intended purpose! The manufacturer accepts no liability for damage resulting from improper use or improper handling.
- Before connecting to the mains, make sure that the current and voltage correspond to the values on the rating plate.
- Do not immerse the device in water or any other liquid. If the appliance has been dropped into the water, unplug it immediately! Risk of electric shock!
- Never try to open the cover!
- Do not use the device with wet hands, on wet ground or in a humid environment!
- Never unplug the power supply with wet or damp hands!
- Check the condition of the cable and connector regularly!

Damaged power cords should be replaced by a service center to avoid hazards.

- The unit will not operate if the cord or plug is damaged or otherwise damaged. In such cases, consult a specialist garage.
- Never operate the appliance damaged! Risk of electric shock!
- If you use an extension cord, it must be of sufficient capacity with the rating plate, otherwise the cable and / or connector may overheat!
- This appliance is for household use only!
- Caution! The device is powered on while it is connected to the mains.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard.



This appliance is intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, in children under the age of 8, unless they have been given supervision or instruction concerning use of the appliance by a qualified person. , and understand the dangers of use.

Children should be supervised to ensure that they do not play with the appliance. Children should not be allowed to clean and service without supervision!

SPECIFICATION

Power	16W
Rating	220-240V ~50/60Hz
Timer	12 hours
Screen	LED
Operating	remote controll, Wifi application

ASSEMBLING THE APPLIANCE

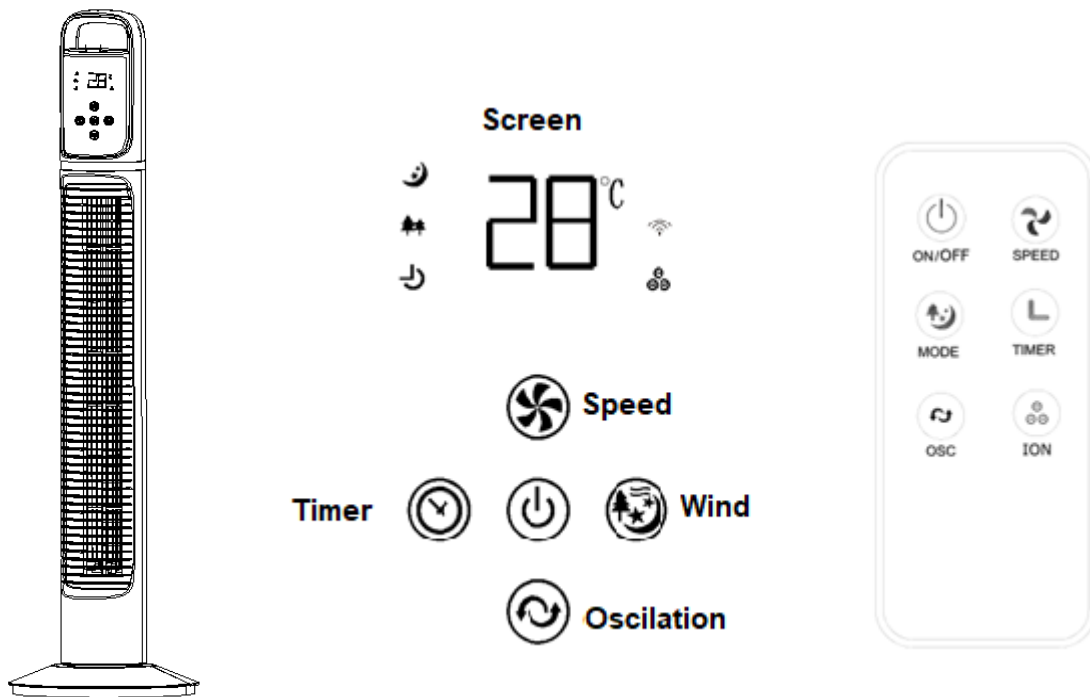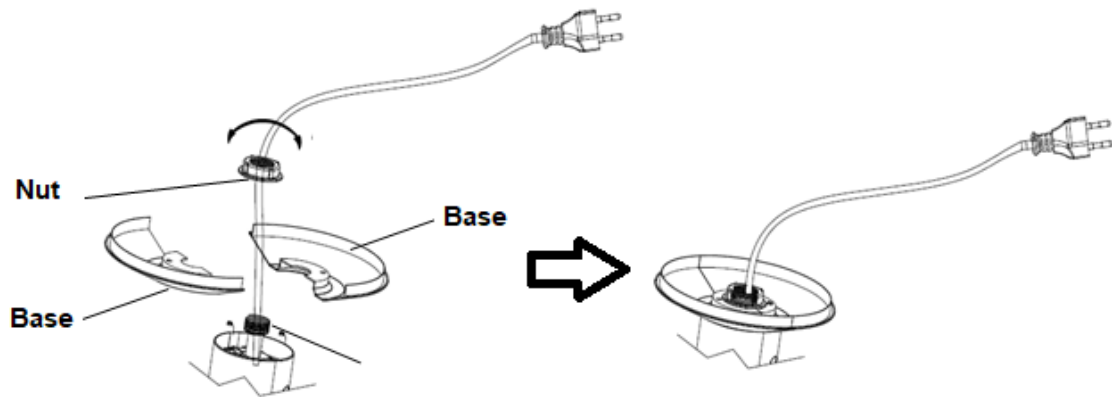

1. Take all of the appliance parts out of the packaging and remove all packaging materials and inserts.
2. Turn the fan upside down, unfasten the nut on bottom of body.
3. Prepare the base which consists of two halves, before connecting two halves, make sure the power cord through the hole of base. Put the connected base onto base bracket. Then fix them with the nut.
4. Lead the power cable on the bottom part of the base through the cable outlet groove.

USING THE APPLIANCE

Insert the plug into the electrical socket. You will hear a short "beep" sound and the display will show the current temperature and fan will switch to standby position. The unit's functions can control by touch panel, remote control or the smartphone application (Tuya Smart)

- 1.ON/OFF: Press the "ON/OFF" button on the control panel or remote control to turn on the unit. The unit will start at low speed, in normal mode. To return to standby mode, simply press the ON/OFF button again.
 2. SPEED: the speed can be adjusted on 8 levels (1-2-...-8) by pressing the "SPEED" button. During operation, the display shows the selected stage.
 3. TIMER: Press the "TIMER" button to set the operating time of the fan from 0 to 12hours. The remaining time is indicated on display.
 4. MODE: Press the "MODE" button to select the natural, the sleep, or the normal operation mode. The fan speed is changed according to the built-in program and ignores the speed set by the SPEED button.
 5. OSC: Press the "OSC" button to activate the oscillation function on or off.
- ION: Press the "ION" button on remote control to activate the ionizer function.

How to use WIFI function

1. Note: the WiFi function only support 2.4G network.
2. Mobile application market (search: TUYA app) download and install.



After installation, open the TUYA app to create a new user (if you have a TUYA account, you can log in directly).


3. Turn the product power on, then long press the control panel wind speed button for 1s-3s, then the WiFi indicator is blinking rapidly.
4. Click the PLUS SIGN in upper right corner of TUYA app, select the small home appliances – fan with WiFi, input the router account and password, select next, then click the "Confirm the indicator is blinking rapidly" and next, the app will automatic to connect the new device .

CLEANING AND MAINTENENCE

Before cleaning the unit, turn off the fan and unplug the plug from the main socket first. Use a soft cloth to clean the surface of the unit and a soft bristled brush to remove dust from the air inlet and outlet grills.

Never spray with liquids or submerge the Pedestal Fan in water or any other liquid. The batteries after used should not be throwing away, it will be reclaimed.

WASTE MANAGEMENT

Correct Disposal of this product	
	<p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p>

Manufacturer/Importer: Vöröskő kft., 8200 Veszprém, Pápai út 36.

CE SYMBOL



The mark is intended to indicate that the product complies with the relevant European Union standards and can be freely marketed in the European Union.

dyras

www.dyras.hu

Copyright © 2022 The dyras wwe.factory LLC U.S.A.

No parts of the content (including logos, design, photos, text, colour scheme arrangements, etc.) may be reproduced, resued or redistrubuted for any purpose whatsoever, or distributed to a thirdparty for such purposes, without the written permission of The dyras wwe.factory LLC.

®= registered trademark of Dyras Europe Kft.

