

Használati utasítás

dyras

4" Asztali ventilátor

Modell: FGD-4B




Kérjük, használat előtt figyelmesen olvassa el a használati útmutatót!

BIZTONSÁGI UTASÍTÁSOK

Kérjük, őrizze meg ezt a használati útmutatót későbbi felhasználás céljából!

1. Ellenőrizze a specifikációnál feltüntetett feszültséget!
2. Ne próbálja meg sajátkezűleg megjavítani a készüléket! Javítandó készülékekkel vagy cserélendő alkatrészsel kapcsolatban mindig forduljon szakszervizhez!
3. Ne működtesse a készüléket nedves kézzel!
4. Ha a tápkábel megsérül, a veszély elkerülése érdekében a gyártónak, annak szervizképviselőjének vagy hasonlóan képzett szakembernek kell kicserélnie!
5. Amikor a készüléket nem használja, kapcsolja ki és húzza ki a konnektorból!
6. Ne használja a készüléket robbanásveszélyes és éghető gázok közelében!
7. A készüléket csak sík felületen használja!
8. Ne használja a szabadban!
9. Ne döntse fel a készüléket! Húzza ki a tápegységet, ha felborul és víz éri. Újbóli használat előtt szárítsa meg a készüléket!
10. Tisztítsa meg a külső felületet enyhén nedves ruhával. Semleges tisztítószerrel is tisztítható. Ne öblítse le vízzel.
11. Használat közben ne ütögesse vagy rázza a testet, különben leállást okozhat!
12. Ne használja a készüléket fürdő, zuhanyzó vagy úszómedence közvetlen közelében!
13. Ezt a készüléket azok a személyek, akik csökkent fizikai, érzékelési vagy szellemi képességekkel rendelkeznek, vagy akiknek a tapasztalata és a tudása hiányzik, továbbá gyermekek 8 éves kortól csak abban az esetben használhatják, ha az felügyelet mellett történik, vagy a készülék használatára vonatkozó útmutatót kapnak, és megértik a használatból eredő veszélyeket.
14. Gyermekek nem játszhatnak a készülékkel! Gyermekek nem végezhetnek a készülék tisztítását felügyelet nélkül!
15. Ne helyezze a készüléket olyan padlóra, amelyen a készülék vibrációja nyomot hagyhat vagy megsérülhet.

TERMÉK FELÉPÍTÉSE

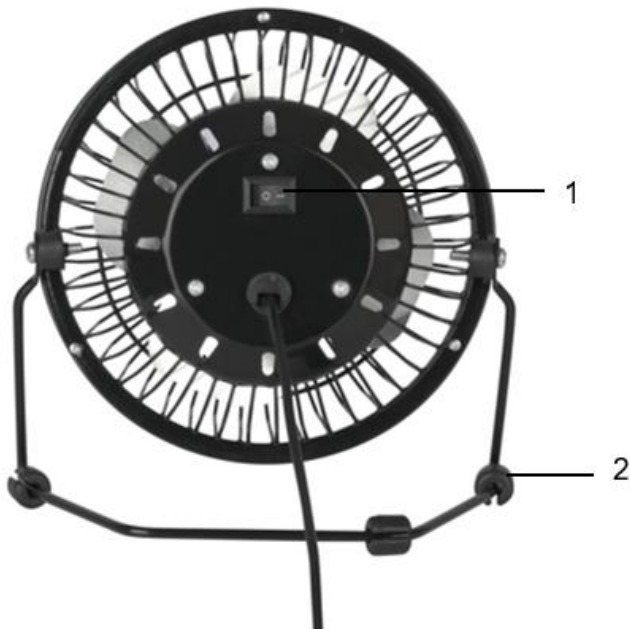

1. Bekapcsoló gomb
2. Gumitalp

ÖSSZESZERELÉS

- Helyezze fel a 3 gumitalpat a készülékre!
- Helyezze a ventilátort egy szilárd, vízszintes felületre és csatlakoztassa az USB kábel segítségével!

MŰKÖDÉS

Beállítás: Kikapcsolás (Off)/Ventilátor (Fan)

1. **Ventilátor (Fan):** Állítsa a kapcsolót az alábbi pozícióba: “_”, így a ventilátor bekapcsol.

2. **Kikapcsolás (Off):** Állítsa a kapcsolót az alábbi pozícióba: “O”, így a ventilátor kikapcsol.

TERMÉK SPECIFIKÁCIÓ

Energiaforrás: USB

Feszültség: DC 5V, 3W

Felhasználási terület: 2-4 m²

Üzem mód: Mechanikus

Levegőellátási mód: Forgó lapát

TISZTÍTÁS ÉS KARBANTARTÁS

- Tisztítás előtt mindig kapcsolja ki és húzza ki az áramforrásból a készüléket!
- Kerülje a mozgó ventilátor részekkel való érintkezést!
- A ventilátor, a rács és a lapátok tisztításához csak puha, nedves ruhát használjon!
- NE merítse vízbe a ventilátort, és soha ne engedje, hogy víz kerüljön a motorházba!
- Soha ne permetezze a készüléket folyadékkal, és ne merítse vízbe vagy más folyadékba!
- NE használjon benzint, festékhígítót vagy más vegyszert a ventilátor tisztításához!
- A rács eltávolítása előtt győződjön meg arról, hogy a ventilátor le van kapcsolva a hálózatról!


Vigyázat: A ventilátorlapát éles szélekkel rendelkezhet. Rendkívül óvatosan kezelje!

TÁROLÁS

Tárolja a ventilátort száraz, hűvös helyen, amikor nem használja!

Tárolja az eredeti csomagolásában az eszközt azért, hogy elkerülje a készülék porosodását és szennyeződését!

HULLADÉKKEZELÉS

| Használt elektromos és elektronikus berendezések megsemmisítése | |
|---|--|
|  | <p>Ez a jelzés a terméken és a csomagoláson azt jelzi, hogy tilos háztartási hulladék közé dobni a már nem használt terméket, mivel kifejezetten környezetszennyező. További részletekkel kapcsolatban érdeklődjön a helyi hatóságnál!</p> <p>Ez a jelzés az Európai Unió teljes területére érvényes. Amennyiben az Európai Uniót kívül szeretné megsemmisíteni a terméket, érdeklődjön az ezzel kapcsolatos szabályzásokról a helyi hatóságnál!</p> |

Gyártó/Importőr: Vöröskő Kft., 8200 Veszprém, Pápai út 36.

A CE SZIMBÓLUM



A jelölés azt hivatott jelezni, hogy a termék a rá vonatkozó Európai Unió előírásoknak megfelel és szabadon forgalmazható az Európai Unió területén.

Instruction manual

dyras

4" Table fan

Model: FGD-4B




Please carefully read the instructions before using!

IMPORTANT SAFEGUARDS

Please save these instructions for further use!

1. Use as per the rating voltage!
2. Do not repair or remake the appliance by yourself. It should be repaired by the repairmen.
3. Do not operate the appliance with wet hands, in order to avoid damage.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. When the appliance is not in use, switch it off and unplug it.
6. Do not use the appliance near explosive and combustible gas.
7. Use the appliance only on a flat surface.
8. Do not use outdoors.
9. Do not turnover the appliance. Unplug the USB power supply if it is toppled over and there have some water in the device. Dry the device before use.
10. Clean the appearance with a lightly damp cloth. It can clean with neutral detergents. Do not rinse with water.
11. Do not knock or shake the device when use, otherwise it may cause stop.
12. Do not use the appliance in the immediate surrounding of a bath, a shower or a swimming pool.
13. This appliance is not intended for use by persons including children with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
14. Children are not allowed to play with the device! Children should not clean the appliance unattended!
15. Do not place this appliance on any flooring that may be marked or damaged by vibration of appliances.

PRODUCT STRUCTURE

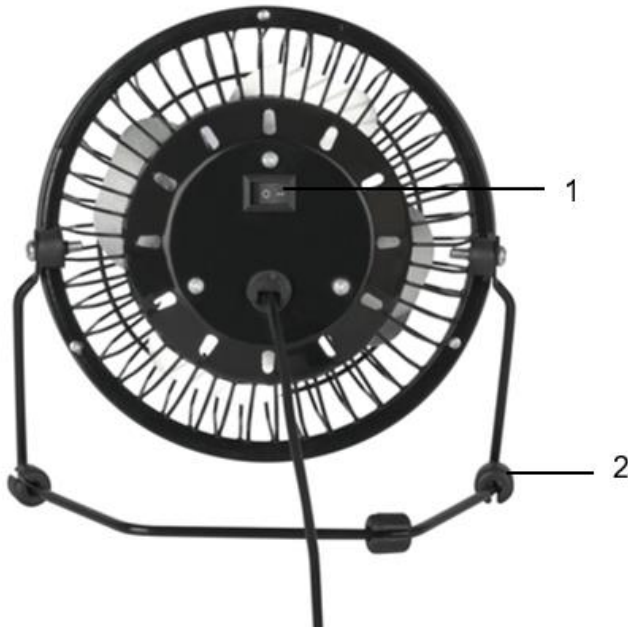

3. Power switch

4. Foot pad

PREPARATION

- Install the 3 foot pads.
- Place the fan on a firm, level surface and use USB cord to connect any power supply (USB power block not included).

OPERATION

Settings: Off/Fan

3. **FAN:** Switch to the “_”, the fan will rotate.

4. **OFF:** Switch to the “O”, the fan will shut down.

PRODUCT SPECIFICATIONS

Power Mode: USB

Voltage: DC 5V, Power: 3W

Applicable area: 2-4 m²

Operation mode: Mechanical

Air supply mode: Rotary vane

CLEANING AND MAINTENANCE

- Always disconnect the fan from USB power supply before cleaning.
- Avoid contact with moving fan parts.
- Use only a soft damp cloth to clean the fan, the grill and the blades.
- DO NOT immerse the fan in water and never allow water to drip into the motor housing.
- Never spray the appliance with liquids or submerge it in water or other liquid.
- DO NOT use gasoline, paint thinner or other chemicals to clean the fan.
- Ensure that the fan is switched off from the supply mains before removing the grill.


CAUTION: The fan blades may have sharp edges. Handle with extreme care.

STORAGE

Store the fan in a cool, dry location when not in use.

To prevent dust and dirt build-up, use the original packaging to repack the unit.

WASTE MANAGEMENT

| Correct Disposal of this product | |
|---|---|
|  | <p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p> |

Manufacturer/Importer: Vöröskő Kft., 8200 Veszprém, Pápai str. 36.

CE SYMBOL



The mark is intended to indicate that the product complies with the relevant European Union standards and can be freely marketed in the European Union.

dyras

www.dyras.hu

Copyright © 2023 The dyras wwe.factory LLC U.S.A.

No parts of the content (including logos, design, photos, text, colour scheme arrangements, etc.) may be reproduced, reused or redistributed for any purpose whatsoever, or distributed to a thirdparty for such purposes, without the written permission of The dyras wwe.factory LLC.

®= registered trademark of Dyras Europe Kft.